

# jWIN®

Model No. **JT-P770**

99 MEMORY CALL WAITING CALLER ID SPEAKER PHONE

## Owner's Manual and Operating Instructions



# Before Initial Use

*Thank you for purchasing your new jWIN JT-P770  
99Memory Call Waiting Caller ID Speaker Phone.*

Please read IMPORTANT SAFETY INSTRUCTIONS  
on page 12 before use.  
Read all instructions.

Call Waiting and Caller ID where available , is a telephone company  
service . After subscribing to Caller ID , this phone will display a  
caller's name and phone number.

## For future reference

Serial No. \_\_\_\_\_ Manufacturing date: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

Dealer's name and address: \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Attach your purchase receipt here

# Contents

---

 
 
 
 
Features .....	3
Location of Control.....	4
Installation and Setting .....	5
INSTALLATION.....	5
SETTING .....	5
Operation .....	7
Important Safety Instruction .....	12

---


## FEATURES:

- FSK Caller ID with Call Waiting
- Up To 110 Build-In Phonebook
- English / Spanish / French/Dutch Language Selectable
- Up To 99 Incoming Call Memories
- 16 Digits Name Display, 16 Digits Telephone Number Display
- Up To 20 Outgoing Call Memories
- 8 Levels of LCD Adjustable Contrast
- 12 Digits Calculation Function
- Do Not Be Disturbed Function
- Date and Time Display
- Pre-dialing Function
- 9 Melody Selectable Ringer
- 3 Digit Digital Lock
- Speakerphone Function
- Pause Function
- VIP Function
- Flash Time Selectable (From 100MS to 900MS)

# Location of Controls

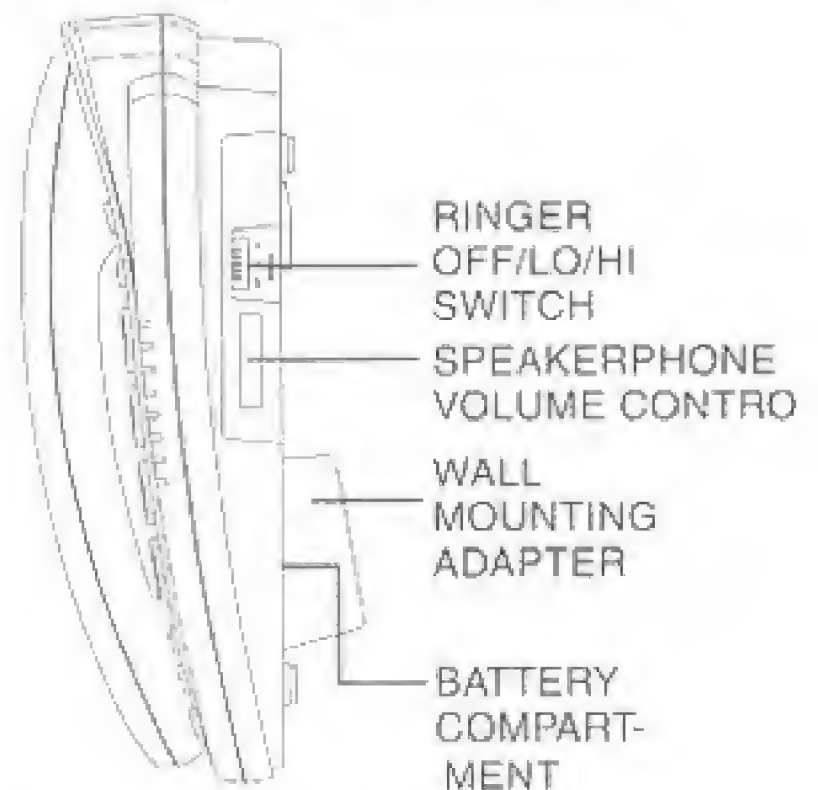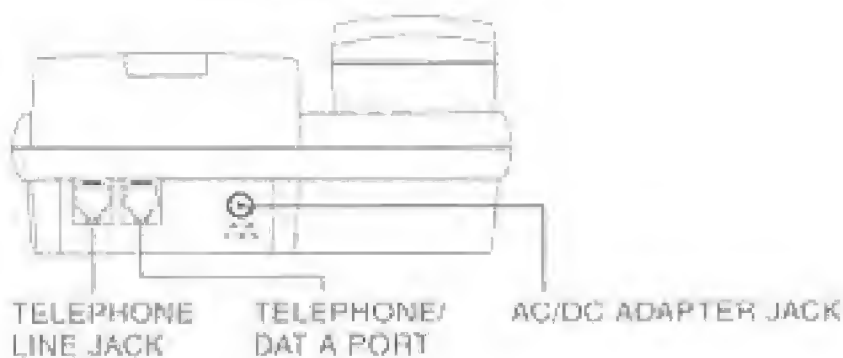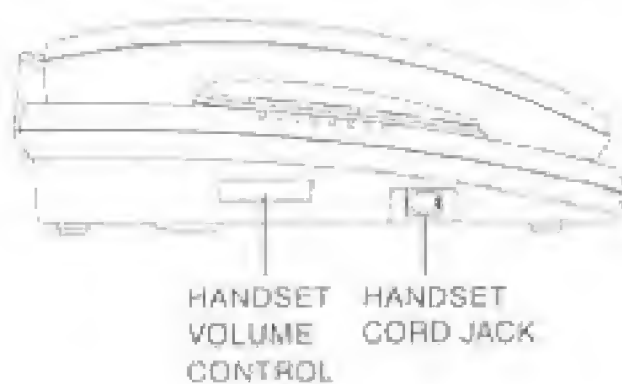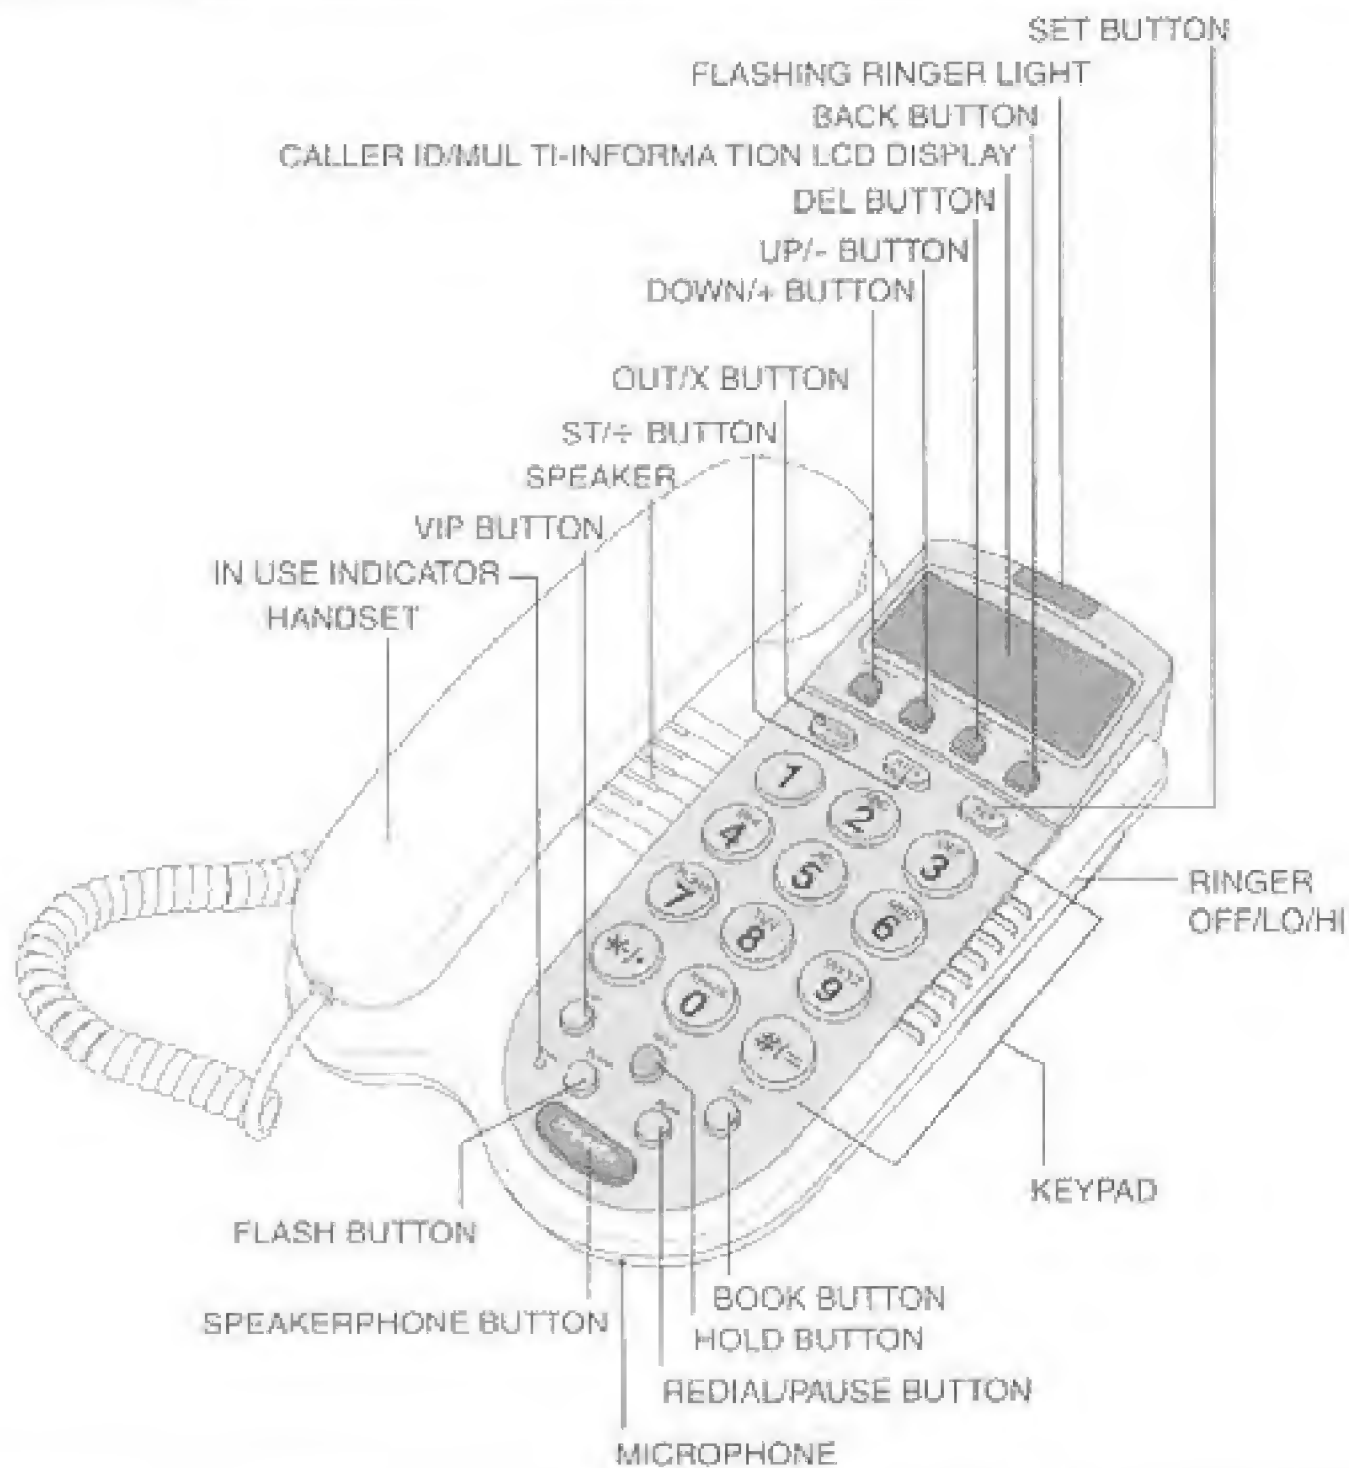

 AC ADAPTER FOR DC JACK  
SPECIFICATION  
OUTPUT-DC 9V, 100 mA  
POLARITY OF PLUG

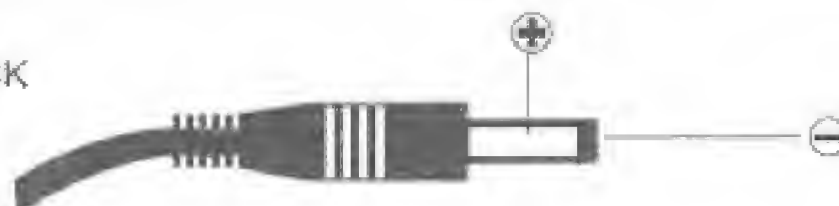

# Installation And Setting

## INSTALLATION

- Plug one end of coiled cord to the jack of handset and the other end to the jack of the base set.
- Plug one end of flat cord to line jack of the phone and the other end to the wall jack
- Open the battery compartment cover, install 3 PCs "AA" batteries (not included) or
- Connect the 9V adapter to the DC jack of the unit

**Note:** 1. Adapter and batteries are not included for the unit.

2. If no batteries and no adapter for power supply, the speakerphone and caller ID function will be unable to used (The LCD will appear blank), but the dial-out and dial-in function can be operated normally by using the handset. If there are no batteries in the unit Or if it's not connected to a power supply, the speakerphone and the caller ID will not function.

3. Pick up the handset first, then replace the batteries, otherwise, all setting and memory will be lost.

## SETTING

**Note:** Please be sure the telephone lines are good connected and batteries are installed before starting setting. In normal operation, press and hold [SET] button to enter the setting mode including Setting Language, LCD Contrast Adjustment, Date and Time Display, Bell and Case Setting, Set Filter, Setting the Local Area Code, Tone/Pulse Setting, Flash Time Setting, Host Code Setting, Host Using Function, Modify Host Code, Exterior Line Function, and Activate Locked Number Function.

### 1. Setting Language

- Press [SET] to enter the setting language.
- Press [SET] to confirm entering language setting.
- Press [UP/-] or [DOWN/+] to select wanted language among ENGLISH, DUTCH, ESPANOL, FRANCAIS
- Press [SET] to confirm and it will prompt to enter LCD Contrast setting.

00:00	16:27	11/20
ENGLISH		

00:00	16:27	11/20
DUTCH		

### 2. LCD Contrast Adjustment

- Press [SET] to enter LCD Contrast Adjustment.
- When the LCD contrast level displays on LCD, press [UP/-] or [DOWN/+] to select the right level. There are totally Eight levels (from level 0-7) for selection.
- Press [SET] button to confirm and it will prompt to enter Time and Date setting.

00:00	16:27	11/20
ESPANHOL		

00:00	16:27	11/20
FRANCAIS		

### 3. Date and Time Display

- Press [SET] to enter Date and Time Display
- Press [UP/-] to select the year
- Press [Down] to confirm year
- Repeat first two steps to set the date and time
- Press [SET] button to confirm and it will prompt to enter Alarm Clock setting.

#### **4. Bell and Case Setting**

- Press [SET] to enter Bell and Case Setting. You may set 3 settings of alarm clock at most.
- Press [UP/-] to select alarm 'ON' or 'OFF'.
- Press [DOWN/+] to confirm
- Press [UP/-] to select the desired month and press [DOWN/+] to confirm
- Use the same method to select the desired date and time.
- Press [DOWN/+] to enter the prompt setting, input the prompt word by pressing the key which corresponds to the desired letter several times until the wanted letter appears.
- Press [SET] button to confirm and move to the second set of alarm clock setting.
- Use the same method to set the second and the third set of alarm clock setting.
- Press [SET] to confirm the third alarm setting and it will prompt to enter Set Filter setting.

#### **5. Set Filter**

- Press [SET] to enter Set Filter
- Input the telephone number by using the keypad and press [SET] to confirm, then the incoming number only be shown in LCD display with no ringing sound.
- Press [SET] button to confirm and it will prompt to enter Area Code Setting

#### **6. Setting the Local Area Code**

- Press [SET] to enter local area code setting
- Input the area code number by using keypad
- Press [SET] key to confirm and it will prompt to enter Tone/Pulse setting

#### **7. Tone/Pulse Setting**

- Press [SET] key to enter Tone/Pulse setting
- Press [UP/-] to select the dialing mode. Choose 'T' for tone dialing and 'P' for pulse dialing.
- Press [SET] key to confirm and it will prompt to enter Flash Time Setting

#### **8. Flash Time Setting**

- Press [SET] key to enter Flash Time Setting
- Press [UP/-] to select flash time from 100MS, 200MS, 300MS ... .. 900MS
- Press [SET] key to confirm and it will prompt to enter Host Code Setting

#### **9. Host Code Setting**

- Press [SET] key to enter host code setting
- Enter 6 digits host code by using keypad (original is "000000")
- After right code entered, it will prompt to enter Host Using function.

#### **9(a) Host Using Function**

- Press [SET] key to enter Host Using function
- Press [UP/-] or [DOWN/+] to select 'Host Using' or 'Host Not Using'. If select 'Host Using', the phonebook function can be operated. If select 'Host Not Using', the phonebook function cannot be operated.
- Press [SET] key to confirm and it will prompt to enter Modify Host Code setting

## 9(b) Modify Host Code

- Press [SET] to enter Modify Host Code setting.
- Just enter the new host code by using keypad (must be six digits)
- Press [SET] to confirm and it will prompt to enter Exterior Line Function

**Note:** If you forget the new pin code, please remove the batteries and telephone line cord for a few minutes. Then install the batteries and plug the telephone line cord again, The host code will be reset to original code '000000'.

## 9(c) Exterior Line Function

The exterior line will be used when you dial out a telephone number and want to add the fixed number before the telephone number.

- Press [SET] to confirm and it will prompt to enter Exterior Line Function.
- Input the code which you want to add for the fixed number by using the keypad. Press '\*' after the code if you every time any number you dial out, the code will be added before the telephone number, otherwise, the code will be added before the telephone number only you press the last digit of the code
- For example: If you set '123\*' as exterior number, then every time any number you dial out, '123' will be added before the telephone number. If you set '123' as exterior number without '\*', the code ('123') will be added before the telephone only if you press '3' first.
- If you set the code only is one digit, then you must press the code first if you want to dial out the external line. (For example, if you set '0' as the code, every time you want dial out external line, you must dial '0' first.).
- Press [SET] to confirm and it will indicate to enter Locked Number function.

**Note:** If you want to cancel the exterior line setting, just press [DEL] and then press [SET] to confirm the cancellation.

## 9(d) Activate Locked Number Function

- Under on-hook state, press [SET] to activate locked number function
- Enter desired digits you would like to lock up and press [SET] to confirm the lock number
- Repeat step two to set the next lock code. Totally five groups of lock code can be set.

**Note:** 1. If you want to edit the lock code, use [UP/-] and [DOWN/+ ] to review set lock code, then press [SET] to enter. Repeat step two and step three for the edit.

2. If you want to cancel the locked code, just press [DEL] and then press [SET] to confirm the cancellation.

# OPERATION

---

## 1. Making A Call

- Lift the handset or press speakerphone the button to get the dial tone
- Enter the wanted telephone number

## 2. Last Outgoing Number Redial

- Lift the handset or press the speakerphone button
- Press [RD/PA] to dial out the last outgoing number

## 3. Review, Delete, Dial Back Incoming Calls

- When the handset is placed on the base unit (on-hook state), press [UP/-] or [DOWN/+] to review the incoming call records.
- When the user wants to dial back the telephone number which is displayed on LCD, press [BACK] to dial back the number. then press [BACK] two times to dial back (adding "1" before number)
- When the user wants to delete the telephone number which is displayed on LCD, press [DEL] to delete the record. Press [DEL] for 3 seconds to delete all incoming records.

## 4. Review, Dial Back, Delete The Outgoing Calls

- In on-hook state, press [OUT/X] to review the last outgoing calls
- When the user wants to dial back the telephone number which is displayed on LCD, press [BACK] to dial back the number
- When the user wants to delete the telephone number which is displayed on LCD, press [DEL] to delete the record. Press [DEL] for 3 seconds to delete all outgoing records.

## 5. VIP Function

- When you review incoming calls, press [ST/÷] then press [VIP] key and the displaying call will be set into VIP call. The LCD will display as follow:



- '1' means the first ringing type. You may choose ringing type from 1-9 by using [UP/-].
- Press [SET] to confirm the ringing type. Then you may insert or edit the VIP name.
- Press [SET] or [ST/÷] to confirm.

## 6. Pre-Dialing Function

- Enter the wanted telephone number first
- Lift the handset or press the [SPEAKER] button, the entered number will be dialed out automatically

**Note:** You may use [DEL] to modify or erase the number while entering the wanted telephone number.

## 7. Phonebook Input

### Input Number and Name When Reviewing Incoming Call

- When you review incoming calls and want to save the displayed number into phonebook, press [ST/ ÷ ] and then press [BOOK] to enter phonebook
- Input the name by pressing the key which corresponds to the desired letter several times until the wanted letter appears (For example: to enter a "R", just press the [7] key three times)
- Wait 2 seconds then enter the next letter, and use the same method to set the remaining letters
- Press [SET] or [ST/ ÷ ] key to confirm
- If the incoming call has name display, just press [ST/ ÷ ], [BOOK] and [SET] at the same time to save into phonebook.

### Input Number and Name In Normal Situation

- Under on-hook state, press [BOOK] to enter phonebook searching. Press [ST/ ÷ ] key to enter phonebook saving.
- Input the telephone number and then press [SET] or [ST/ ÷ ] to confirm.
- Input the name and then press [SET] or [ST/ ÷ ] to save into phonebook
- Repeat the second and the third step if you want to input the data continuously.
- Press [FLASH] to exit.
- If the memory of phonebook is already full, the LCD will show "TEL BOOK IS FULL".
- Please delete some old records if you want to input new records.

**Note:** a) The phonebook function only can be operated under Host Using activated.

b) When input the record, use [0] as a space.

# OPERATION

---

## 8. Phonebook Edit

- Under on-hook state, press [BOOK] to enter phonebook searching.
- Enter the first letter of the name by pressing the key which corresponds to the desired letter several times until the wanted letter appears.
- The LCD will show the closest match, use [UP/-] or [DOWN/+] to search the wanted record.
- After the wanted record appears, use [DEL] to erase the old number or press [SET] to edit the telephone.
- After you input the correct telephone number, press [SET] to confirm and the cursor will move to the name position, use [UP/-] or [DOWN/+] to move the cursor, use [DEL] to erase the letter and then enter the new one.
- Press [SET] to confirm.

## 9. Calculation Function

- Under on-hook state, press '#/=' key to enter calculations functions directly.
- Press [DOWN/+] for '+', press [UP/-] for '-', press [OUT/X] for 'x', press [ST/÷] for '÷', press [#/=] for '='.
- Press [DEL] to clear the display.
- Press [FLASH] to escape this function.

**Note:** If calculation function not in use for 20 seconds, it will exit this function.

## 10. Do Not Be Disturbed Function

- Under on-hook state, press [VIP] key for 3 seconds, "SLEEP 00-00" will display on LCD to indicate the telephone's do not disturb time setting state.
- Press [UP/-] key once, then the do not disturbed time is one hour. And press [UP/-] once to add 1 hour.
- Under do not disturb state, press [VIP] key to exit from this state and press it again to enter the state again.
- If the telephone under do not disturbed state, the ringer will not be activated by incoming calls, the number and time of incoming calls will be stored automatically.
- The user can dial a outgoing calls under this state, and the remaining time of do not be disturbed time will display on LCD.
- If user wants to cancel Do Not Be Disturbed Function, press [VIP] for 3 seconds and it will return to "SLEEP 00-00". Then press [FLASH] to escape this function.

## 11. Flash Function

- Under off-hook state, press [FLASH] once, the telephone will enter on-hook state for 600ms (the flash time is based on the setting flash time.), then re-connect the line

## 12. Pause Function

- In some cases, such as PABX or long distance service, pauses should be inserted in the dialing sequence. The unit provides stackable pause function (3.6sec/pause) by pressing [RD/PA] key when telephone is off-hook mode.

## 13. Music Hold

- During conversation, press [HOLD] once  
Put back the handset or press the speakerphone button if the speakerphone is activated Lift the handset or press the speakerphone button to talk with the caller

## 14. Call Access Prevention Setting

To prevent from the telephone line stolen by the illegal users, the call access prevention setting can be set as follows:

- In on-hook state, press [FLASH] for 3 seconds to enter the Call Access Prevention Setting.
- The LCD will display 'ALAR OFF', use [DOWN/+] or [UP/+] to select 'ON' or 'OFF'. Then press [SET] to confirm
- When the setting was set to 'ON', the extension phone cannot be operated normally. The extension line would be interfered after pick up the phone. No call can be dialed out as well call received.
- When the setting was set to 'OFF' to cancel the Call Access Prevention setting. The extension phone can be operated normally to dial out and receive calls.

# **SAFETY INSTRUCTIONS**

- This telephone is an electrical device and can be hazardous if immersed in water.

If you accidentally drop it into water, first unplug it from wall jack, and remove it from water.

- Please keep the telephone dry and do not use it in a moist place. for example, near a bathtub, washbowl, kitchen sink, laundry tub or swimming pool. Do not use it in rain.
- Unplug the phone from the wall jack before cleaning with damp cloth; please do not use liquid or aerosol cleanser.
- Do not use the phone to report a gas leak in the gas vicinity. Please remove yourself immediately from the area and make the emergency phone from area.
- Handle the phone carefully. Do not drop it.
- Do not use or put the unit in extreme temperatures.
- Keep the phone away from dust and dirt.
- Use the correct power batteries indicated in the manual. Do not put batteries in a fire for such action can lead to an explosion.
- Do not modify or tamper with the telephone's internal components. Improper adjustment can cause damage and can be dangerous.